

R3T Engine Cover Instructions

- 1. Disconnect Air Intake and Ram Air Piece from Stock Air Box.
- 2. Remove Stock Air Box.
- 3. Use a 10mm socket to loosen and remove the (2) front stock air box mount points, located near the oil cap and crankcase breather housing.
- 4. Included with your engine cover are two stand-offs. One is shorter in length than the other. The shorter stand-off will install on the driver side mount location, nearest to the crankcase breather housing. The longer stand-off will install on the passenger side mount location, nearest the oil cap. Push provided bolts through holes on engine cover, and slide stand offs over the bolt on the back of the engine cover. The tape on the bolt will keep the stand attached to make lining up with engine mounts easier.
- 5. Fit engine cover to mount points and tighten down using an alan head tool. Get both points attached before tightening down all the way.
- 6. After tightening, you're all done!

Contact us with any questions! Thanks for your purchase!

